




SKYBELL™

WI-FI VIDEO DOORBELL

Installation Guide




SkyBell™ Components

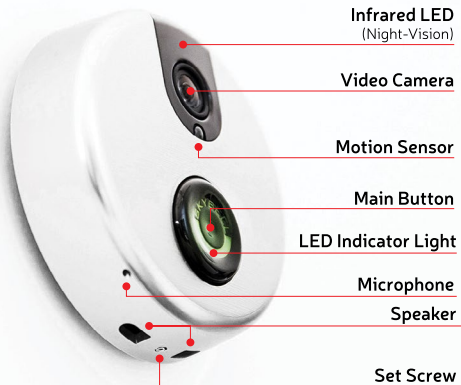


Contents


SkyBell
Doorbell Device



Mounting
Plate



Wedge Mount
(Sold Separately)



Special Locking Tool



Wall Screws (2)



Screw Anchors (2)



Wire Connectors (4)
(2 extra)



Set Screw (Extra)



Tools You May Need for Installation:

- Pliers or Crimpers
- Outdoor Adhesive
- Power Drill or Screw Driver
- Wire Strippers

Welcome!

Thank you for becoming a member of the **SkyBell™** family. Please take a minute to carefully review these instructions so you can enjoy your SkyBell experience.

Visit our website for instructional videos and access to support information.

Installation Videos:

www.skybell.com/support/installation/

Support:

www.skybell.com/support/

Customer Service:

support@skybelltechnologies.zendesk.com

1

PRE-INSTALLATION CHECKLIST

1. Doorbell Chime - SkyBell is compatible with mechanical and digital door chimes. Wireless door chimes are not supported. Digital door chimes require an adapter, which is sold separately on our website. (www.SkyBell.com)

2. Wi-Fi Speed - You must have at least 1.5 mbps upload speed outside your front door. Insufficient Wi-Fi speed will cause video and audio performance issues. For more details on how to check your Wi-Fi speed, visit : www.skybell.com/support/wi-fi-speed-test.

3. Router Quality - Your SkyBell experience will only be as good as your router. We recommend using a router that is less than 3 years old, and manufactured by a recognized brand. Old routers and uncommon router brands may not be supported.

4. Router Band - SkyBell will only connect to the 2.4 GHz band. If you have a dual-band router, you must create unique SSIDs for the 2.4 and 5 GHz bands. Prior to initiating the syncing process, make sure your mobile device is connected to the 2.4GHz SSID.

5. Router b/g/n - SkyBell works on the b/g network. If you have an "N-Only" router, please activate the b/g setting.

6. Router Channel Bandwidth - Make sure your router is configured to 20 MHz bandwidth.

7. Transformer - If your SkyBell is being powered by your home's transformer, the transformer's output must be between 10 and 36 VAC 10 VA.

8. Accessories - For more information on installing an accessory, please visit section 4 before starting the installation.

2 POWER CONFIGURATIONS

Prior to installing your SkyBell, make sure your home is compatible with one of the power configurations listed. Power configuration diagrams are available at www.skybell.com/support/power.

Unless otherwise indicated, all power configurations require primary power (110/120 VAC in the US and 220/230/240 VAC, in Europe) and a low-voltage transformer (10-36V 10 VA).

1. A MECHANICAL DOOR CHIME AND LOW VOLTAGE TRANSFORMER (recommended).

2. A DIGITAL DOOR CHIME WITH ADAPTER AND A LOW VOLTAGE TRANSFORMER.

3. WITHOUT A DOOR CHIME

Setup 1:

Primary Power;

Low-voltage transformer (10-36 VAC 10 VA); and

10 Ohm/10 Watt resistor inserted between one wire from the SkyBell and one wire from the power source

OR

Setup 2:

12 VDC power supply; and

10 Ohm/10 Watt resistor inserted between one wire from the SkyBell and one wire from the power source

Warning!

Installing your SkyBell with an improper power configuration will automatically void your Limited Warranty (<http://www.skybell.com/warranty>).

Warning!

Coming into contact with a transformer can cause injury or loss of life. Use extreme caution when installing SkyBell.


3

INSTALLATION INSTRUCTIONS


(STANDARD MOUNT)

** For wedge mount installation instructions, turn to page 13*

1. Remove your traditional doorbell and carefully detach or cut the 2 wires currently connected to your traditional doorbell.

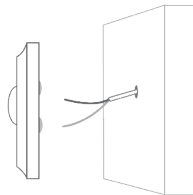

2. Run the wires from your home through the center of the mounting plate. Be sure the front side of the mounting plate faces you.

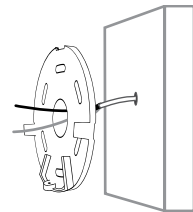

3. Secure the mounting plate to the wall with the two wall screws. If you have stone, brick or drywall, drill holes with the correct drill bit for your surface and use the screw anchors to secure the screws to the wall.

Correct Drill Bit Sizes:


1. Masonry: 3/16"
2. Wood: 9/64"
3. Steel: 9/64"

Instead of drilling into your wall, you may use an outdoor adhesive to glue the mounting plate to your wall or door frame.

Warning!

If you do not use a door chime, you must use a 10 Ohm / 10 Watt resistor with one connection between SkyBell and the power source. Failure to do so could damage your device and will automatically void your limited warranty. For more details: www.skybell.com/support/power and www.skybell.com/legal

4. Gently twist together the ends of a SkyBell wire and a home doorbell wire as shown.

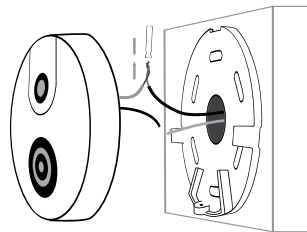

5. Next, insert the joined wires into a blue wire connector and push until the wires reach the end of the wire connector.

Either wire from your SkyBell may be connected to either wire from your home.


6. With a pair of pliers, clamp down on the wire connector and crimp the wires together.

7. Repeat steps 4-6 with the other two remaining wires.

8. Next, confirm that the red LED light is on.
The light will be in one of three states:

- 1) **Double blinking red**: indicates the battery is in charging mode.
- 2) **Single blinking red**: indicates the device is in sync and ready to sync.
- 3) **Solid red**: indicates the main button must be pressed for 20 seconds to place the device into sync mode.

9. The set screw is already in place in the bottom-center hole of the mounting plate. Place the SkyBell completely over the mounting plate and insert the locking tool into the middle hole at the bottom-center of the device. Turn the tool counter-clockwise (right to left) 3 full rotations. This will draw the set screw down and lock the SkyBell into place. Be sure that the screw is not exposed beyond the bottom of the device.

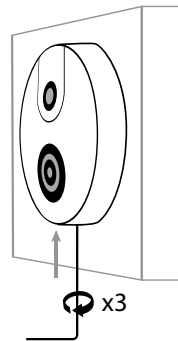

10. Your SkyBell is now properly installed.

11. Before starting the syncing process, please give SkyBell 10 minutes to charge the battery.

4 INSTALLATION INSTRUCTIONS

(WEDGE MOUNT)

Wedge Mount Accessory

The wedge mount allows you to angle SkyBell in the direction of your door or visitors.



1. Remove your traditional doorbell from the wall and either detach or cut the wires currently connected to your traditional doorbell.
2. Run the wires from your home through the center of the wedge mount. The front of the wedge mount, with a raised lip around the center circle, should face outward.
3. Position the wedge mount so that the SkyBell will be angled toward your visitor. The wedge mount may be rotated in any direction.

4. Place the mounting plate (included with your device) on top of the wedge mount so that the set screw at the bottom of the mounting plate is facing down.

5. Align the holes in the mounting plate with the holes in the wedge mount. Use the two wall screws included with your SkyBell to secure the mounting plate and wedge mount to the desired wall.

Follow the rest of the installation instructions on page 8.

For more support documentation, visit:
<http://www.skybell.com/support>

Door Frame Adapter Accessory

This accessory allows you to install your SkyBell onto a door frame.

Note: your door frame should be 2.5 inches thick and a flat surface.



1. To get started, pass the wires through the center hole faces outward.
2. Place the door frame adapter against your door frame so that the extended portion sits flush against the outside of the door frame. Be sure that the lip around the center hole faces you.
3. Place the mounting plate (included with your device) directly on top of the door frame adapter. If necessary, you can place a wedge mount between the door frame adapter and the mounting plate. Position the mounting plate so that the set screw faces downward.

4. Secure the mounting plate and the door frame adapter to the door frame with the two screws included with your device.

Follow the rest of the installation instructions on page 8.

For more support documentation, visit:
<http://www.skybell.com/support>

5 SYNCING PROCESS

This section will provide step-by-step instructions for syncing your SkyBell to your Wi-Fi router and smartphone.

What you need:

1. A compatible iOS® or Android® device (for a list of compatible devices visit www.Skybell.com/support)
2. The name of your Wi-Fi network
3. Your Wi-Fi network password (if necessary)
4. The SkyBell Activation Code (device ID)

Register

1. Download the app from the iTunes App Store® or the Google Play Store®. Search “SkyBell” and select our free app.
2. On the home screen of the app, tap “Register” and create an account by entering your information and completing the account creation process.
3. Then log out of the app by tapping the settings wheel tapping “Sign Out”.
4. Next, sign back into the app with your new account credentials.

The Syncing Process

From the home screen in the app, tap the link that says, “Add device” or “Add SkyBell”. Follow the screens that will guide you through the syncing process.

Once your SkyBell setup process is complete, SkyBell will automatically begin downloading the newest firmware.

Please wait 5 minutes before pressing the SkyBell button. You may see the LED light turn red, then turn off, then turn green. This is normal.

If the setup is unsuccessful:

1. Tap “Cancel” in the app or click “OK” to the pop-up message. Restart the syncing process from the beginning and make sure you accurately enter your Wi-Fi password.

2. After your third unsuccessful sync attempt, please contact customer service for assistance.

Customer service is open 7 days a week from
7:00am-3:30pm (Pacific).

949-407-7784

support@skybelltechnologies.zendesk.com

LED LIGHT KEY

Red (Solid) After successful sync = Device has power but no Wi-Fi or internet connection

Red (Solid) Before successful sync = Device must be placed into sync mode by holding down the main button for 20 seconds.

Red (Single Blink) = Device is in syncing mode

Red (Double Blink) = Device is charging

Green (Solid) = Device has power, Wi-Fi and server connection (normal)

Green (Blinking Slow) = Device has power and Wi-Fi but is not connecting to SkyBell's server

ELECTRICAL SHOCK HAZARD

Turn off power to the area where you will install the SkyBell at the circuit breaker or fuse box before beginning installation. Failure to turn off the power before installation may result in serious electrical shock, injury or death.

Do not restore power until the SkyBell has been completely installed. Restoring power before installation is complete may result in serious electrical shock, injury or death.

If you are replacing your transformer, turn off power to your transformer at the circuit breaker or fuse box before beginning installation. Failure to turn off the power before installation may result in serious electrical shock, injury or death.

Do not restore power to your transformer until the new transformer has been completely installed.

Restoring power before installation is complete may result in serious electrical shock, injury or death. If you are replacing your door chime, turn off power to your transformer at the circuit breaker or fuse box before beginning installation. Failure to turn off the power before installation may result in serious electrical shock, injury or death.

IMPORTANT INFORMATION ABOUT YOUR RIGHTS AND OBLIGATIONS AS WELL AS LIMITATIONS AND EXCLUSIONS THAT MAY APPLY TO YOU.

Product Limited Warranty

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES OR ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY OR CONDITION MAY LAST, SO THE LIMITATIONS OR EXCLUSIONS DESCRIBED BELOW MAY NOT APPLY TO YOU TO THE EXTENT THEY ARE INCONSISTENT WITH YOUR STATE'S APPLICABLE LAW. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS UNDER STATE LAW.

DO NOT ATTEMPT TO POWER YOUR SKYBELL WITH AN IMPROPER POWER CONFIGURATION. INFORMATION REGARDING ALL SUPPORTED POWER CONFIGURATIONS CAN BE FOUND AT WWW.SKYBELL.COM/SUPPORT (POWER CONFIGURATION DIAGRAMS).

FAILURE TO STRICTLY ADHERE TO OUR POWER CONFIGURATION GUIDELINES WILL AUTOMATICALLY VOID THIS LIMITED WARRANTY.

SkyBell Limited Warranty

Subject to the terms and conditions of this Limited Warranty, SkyBell Technologies, Inc. ("SBT"), warrants to you only (the original purchaser), that under normal use, the SkyBell Wi-Fi enabled video doorbell (the "Product") will substantially conform with the specifications listed on the box in which your SkyBell was originally packaged and be free of reproducible defects that eliminate the functionality or successful operation of a feature critical to the primary functionality or successful operation of the Product for a period of one (1) year from the date of your Product purchase (the "Warranty Period"). This Limited Warranty only applies to Products purchased from SkyBell or an authorized SkyBell reseller. A list of authorized resellers can be found at www.skybell.com/legal/.

Exclusive Remedy

During the Warranty Period, SBT will, at its sole option, repair or replace any Product or parts of a Product that fail in normal use. Such repairs or replacement will be made at no charge to the customer for parts or labors. SBT retains the exclusive right to replace the Product with a new or refurbished "like new" Product in its sole discretion. A replacement Product or part assumes the remaining warranty of the original Product or ninety (90) days from the date of replacement or repair, whichever provides longer coverage for you. When a Product or part is exchanged, any replacement item becomes your property and the replaced item becomes SBT's property. There is no warranty of any kind for any defects discovered after the Warranty Period has lapsed.

SUCH REMEDY SHALL BE YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY BREACH OF THIS LIMITED WARRANTY.

Obtaining Warranty Service

To receive instructions for obtaining repair or replacement warranty services you must

e-mail: support@skybelltechnologies.zendesk.com.

You must receive shipping instructions and an RMA tracking number from SBT prior to shipping your device to us. Write the RMA tracking number clearly on the outside of the package. Send the device, freight charges prepaid, to the address on the RMA label.

You must also:

1. Submit proof of purchase in the form of a bona fide, dated bill of sale, receipt, or invoice (or a copy) from an Authorized Reseller evidencing that your request for service is made within the Warranty Period; and
2. Follow shipping and other instructions to ensure the Product has an adequate degree of protection against damage during transit to the location specified by SBT. Except as otherwise required by legislation in your jurisdiction, costs associated with transport (including packaging) for warranty service shall be at your expense.

Failure to follow the above instructions may result in delays, cause you to incur additional charges or may void your warranty.

Exchanging Your Device

If we provide you with warranty service by sending you a replacement device, you will be required to return your original device to us. In the event we do not receive your original device within 30 days of sending your replacement device, you hereby agree that we have the right to charge you for the full retail price of the replacement device and/or not send you a replacement device. Full retail price shall be equal to the sale price on our website (www.skybell.com) not including sales, promotions or other discounts.

In addition to any other remedies available to us, if we have shipped a new device to you and we have not received your original device within 30 days from the initiation of the return process, we shall have the right to terminate your original device and/or your replacement.

No Other Warranties

THE WARRANTIES AND REMEDIES CONTAINED HEREIN ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES EXPRESSED, IMPLIED, OR STATUTORY, INCLUDING ANY LIABILITY ARISING UNDER ANY WARRANTY OF MERCHANT-ABILITY OR FITNESS FOR A PARTICULAR PURPOSE, STATUTORY OR OTHERWISE. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, WHICH MAY VARY FROM STATE TO STATE.

THE EXPRESS WARRANTY STATED HEREIN IS THE ONLY EXPRESS WARRANTY MADE TO YOU AND IS PROVIDED IN LIEU OF ALL OTHER EXPRESS OR IMPLIED WARRANTIES AND CONDITIONS (IF ANY) INCLUDING ANY CREATED BY ANY OTHER DOCUMENTATION OR PACKAGING. NO OTHER WARRANTIES OR CONDITIONS ARE MADE WITH RESPECT TO THE PRODUCT OR THE WARRANTY SERVICES BY ANY PERSON, INCLUDING BUT NOT LIMITED TO SBT AND ITS SUPPLIERS. NO INFORMATION (ORAL OR WRITTEN) OR SUGGESTIONS GIVEN BY SBT, ITS AGENTS OR SUPPLIERS, OR ITS OR THEIR EMPLOYEES, SHALL CREATE A WARRANTY OR CONDITION OR EXPAND THE SCOPE OF THIS LIMITED WARRANTY. ALSO, THERE IS NO WARRANTY OR CONDITION OF TITLE, QUIET ENJOYMENT, OR NON-INFRINGEMENT IN THE PRODUCT. YOU MAY HAVE GREATER RIGHTS EXISTING UNDER LEGISLATION IN YOUR JURISDICTION. WHERE SUCH LAWS PROHIBIT ANY TERM OF THIS LIMITED WARRANTY, IT SHALL BE NULL AND VOID, BUT THE REMAINDER OF THE LIMITED WARRANTY SHALL REMAIN IN FULL FORCE AND EFFECT.

WITHOUT LIMITING THE GENERALITY OF THE DISCLAIMERS CONTAINED HEREIN, ALL PRODUCT INFORMATION IS PROVIDED FOR YOUR CONVENIENCE, "AS IS", AND "AS AVAILABLE". SBT DOES NOT REPRESENT, WARRANT, OR GUARANTEE THAT PRODUCT INFORMATION WILL BE AVAILABLE, ACCURATE, OR RELIABLE.

SBT MAY ALSO PROVIDE OR SELL PRODUCTS WHICH ARE INTENDED TO BE USED WITH YOUR SKYBELL ("PRODUCT PERIPHERALS"). YOU USE THE PRODUCT, ALL PRODUCT INFORMATION, AND THE PRODUCT PERIPHERALS AT YOUR OWN RISK. YOU WILL BE SOLELY RESPONSIBLE FOR (AND SBT DISCLAIMS) ANY LIABILITY, OR DAMAGES, INCLUDING BUT NOT LIMITED TO YOUR WIRING, FIXTURES, ELECTRICITY, HOME, PRODUCT, PRODUCT PERIPHERALS, COMPUTER, MOBILE DEVICE, AND ALL OTHER ITEMS AND PETS IN YOUR HOME, RESULTING FROM YOUR USE OF THE PRODUCT, PRODUCT INFORMATION, OR PRODUCT PERIPHERALS.

Exclusion of Consequential, Incidental, and Certain Other Damages, and Limitation of Liability

TO THE FULL EXTENT ALLOWED BY LAW, SBT IS NOT LIABLE FOR ANY:

- (i) CONSEQUENTIAL OR INCIDENTAL DAMAGES;
- (ii) DAMAGES OR LOSS OF ANY NATURE WHATSOEVER RELATING TO LOST PROFITS, LOSS OF OR DAMAGE TO PERSONAL PROPERTY, LOSS OF DATA OR PRIVACY OR CONFIDENTIALITY, ANY INABILITY TO USE ALL OR PART OF THE PRODUCT, PERSONAL INJURY, OR ANY FAILURE TO MEET ANY DUTY (INCLUDING BUT NOT LIMITED TO ANY LACK OF NEGLIGENCE OR OF WORKMANLIKE EFFORT); OR (iii) INDIRECT, SPECIAL, OR PUNITIVE DAMAGES ARISING OUT OF RELATING IN ANY WAY TO THE SKYBELL PRODUCT.

SBT'S CUMULATIVE LIABILITY, WHETHER FOR BREACH OF CONTRACT, WARRANTY, NEGLIGENCE, STRICT LIABILITY IN TORT, INDEMNIFICATION, CONTRIBUTION, OR OTHERWISE, SHALL BE LIMITED TO THE DIRECT DAMAGES RECOVERABLE UNDER LAW, BUT NOT TO EXCEED THE PURCHASE PRICE FOR THE SKYBELL PRODUCT. YOU HEREBY RELEASE SBT, ITS MANUFACTURERS, SERVICE PROVIDERS, LICENSORS AND EACH OF THEIR RESPECTIVE AFFILIATES, FROM ANY AND ALL OBLIGATIONS, LIABILITIES, AND CLAIMS IN EXCESS OF THIS LIMITATION. SBT IS ALSO NOT LIABLE FOR ANY COSTS OR DAMAGES ARISING FROM OR RELATED TO YOUR BREACH OF THIS AGREEMENT. SBT, ITS MANUFACTURERS, SERVICE PROVIDERS, LICENSORS AND EACH OF THEIR RESPECTIVE AFFILIATES, DISCLAIM ANY REPRESENTATION THAT IT WILL BE ABLE TO REPAIR ANY PRODUCT UNDER

THIS LIMITED WARRANTY OR MAKE A PRODUCT EXCHANGE WITHOUT RISK TO OR LOSS OF PROGRAMS OR DATA. ALL CLAIMS BY YOU, WHETHER IN TORT, CONTRACT, STRICT LIABILITY OR OTHERWISE, MUST BE BROUGHT WITHIN TWO YEARS FROM THE DATE THE CAUSE OF ACTION ACCRUES. THIS LIMITATION OF LIABILITY CONSTITUTES AN ESSENTIAL PART OF THIS AGREEMENT.

THE FOREGOING APPLIES EVEN IF SBT OR ANY SUPPLIER OR AGENT HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSSES OR DAMAGES; EVEN IN THE EVENT OF FAULT, TORT (INCLUDING NEGLIGENCE), STRICT OR PRODUCT LIABILITY, MISREPRESENTATION OR OTHER REASON; AND EVEN IF ANY REMEDY FAILS OF ITS ESSENTIAL PURPOSE.

Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. If any term of this Limited Warranty is held to be illegal or unenforceable, the legality or enforceability of the remaining terms shall not be affected or impaired.

Exclusions From Limited Warranty

This warranty does not apply to: (i) theft or loss of the Product; (ii) damage caused by accident, abuse, misuse, water, flood, fire, or other acts of nature or external causes; (iii) damage caused by service performed by anyone who is not an authorized service provider of SBT; (iv) damage to a product that has been modified or altered without the written permission of SBT; (v) any damage or defects caused by rough handling or extreme thermal or environmental conditions or a rapid change in such conditions, corrosion, oxidation, unauthorized modifications or connections, unauthorized opening or repair, repair by use of unauthorized spare parts, accidents, forces of nature, or other actions beyond the reasonable control of SBT; (vi) any damage or defects caused by operating the

product outside of the permitted or intended uses described on SBT's website; (vii) damage caused during a SkyBell installation; (viii) damage caused by connecting SkyBell to an improper power configuration; or (viv) cosmetic damage, such as scratches, nicks and dents.

In addition, SBT reserves the right to refuse warranty claims against products or services that are obtained and/or used in contravention of the laws of any country.

Geographic Limitations

Devices returned from outside the US and Canada may not be able to be returned due to an act of God, war, embargo or other act by one or more sovereign nations limiting commerce between the US and another country or some other action or event outside SBT's control. Return of devices from outside the US and Canada is at your own risk. SBT is not responsible for providing a replacement device if, in SBT's sole discretion, it cannot successfully or legally ship a product to an international destination.

Reseller Limitations

This Warranty only applies to devices purchased from SkyBell or an Authorized Reseller. A list of Authorized Resellers can be found on www.skybell.com/legal. Devices purchased from unauthorized dealers and/or individuals reselling new or used devices, are not eligible to receive Warranty service or a refund of any kind.

THE LIMITED WARRANTY IS SUBJECT TO CHANGE FROM TIME TO TIME AT SBT'S SOLE DISCRETION AND WITHOUT NOTICE.

SkyBell and SkyBell Technologies, Inc. are trademarks SkyBell Technologies, Inc., registered in the U.S. and other countries.

SKYBELL™
WI-FI VIDEO DOORBELL

WWW.SKYBELL.COM